



How to change a SKY HD remote control to a SKY Plus remote.

- To change it to a Sky Plus remote.
- 1 Press the TV button
- 2 Press and hold SELECT and i together until the LED flashes twice.
- 3 Press the number button 1 and then press select.

- To change it back to a Sky HD remote
- 1 Press the TV button.
- 2 Press and hold SELECT and i together until the LED flashes twice.
- 3 Press the number button 2 and then press select.

A SKY Plus remote cannot be made to work SKY HD.